


# DrayTek Vigor 2765 AC

## 1. HARDWARE GUIDE


### WHAT'S INCLUDED

1. Vigor Router
2. 2x detachable antenna
3. Power supply
4. Ethernet cable
5. Wall mount template

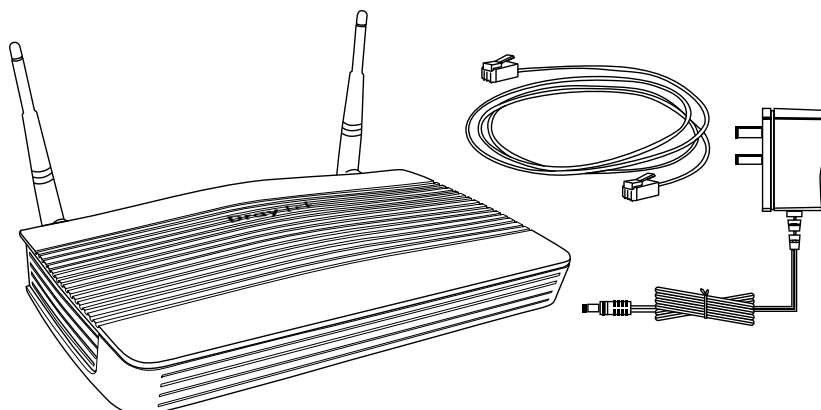

### ROUTER SET UP

1. Remove protective film from the router
2. Connect detachable antennas to the router
3. Connect incoming cable, DSL modem or media convertor
4. Connect outgoing Ethernet cables (wired connections)
5. Plug in the power adaptor
6. Switch on the router

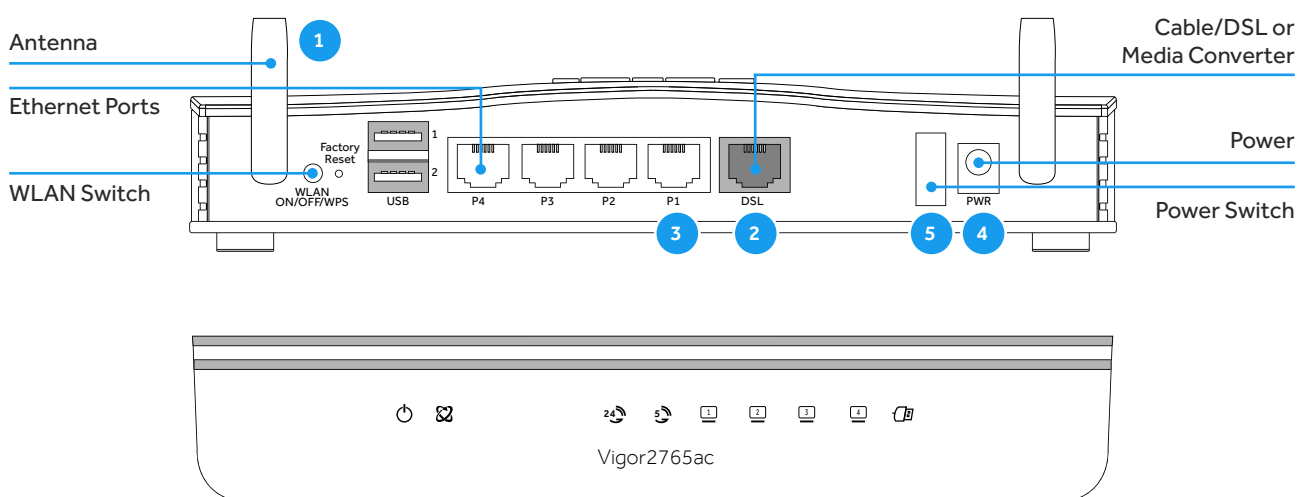

LED	Status	Description
Power	Blinking	The router is powered on and running normally
	Off	The router is powered off
Wireless LAN	On (Green)	The wireless access point is ready
	Blinking (Green)	The data is transmitting via wireless connection (rate of 2.4GHz or 5GHz)
	Blinking (Orange)	Blinks with one second cycle for two minutes. The WPS function is active.
	Off	The wireless access point is turned off
USB	On	A USB device is connected and active
	Blinking	The data is transmitting
DSL	On	The DSL port is connected
	Blinking (Slowly)	The router is ready
	Blinking (Quickly)	The router is trying to connect to Internet
LAN 1-4	On	The LAN port is connected
	Blinking	The data is transmitting
	Off	The LAN port is disconnected

# DrayTek Vigor 2765 AC

## 2. PROVISIONING GUIDE

---

### PROVISIONING THE ROUTER

---

plan.com routers are designed to plug and play – which means you are not required to add any additional information such as usernames, passwords, or to adjust settings.

For your information, here are the automatic steps that your router will undertake before it is ready to use:

1. Follow the steps as outlined on the first page of this guide
2. Once powered on, the router will connect to the internet and communicate with our auto-provisioning server – all of your customer information will be downloaded onto the router within a couple of seconds
3. The router will reboot itself automatically and once rebooted, your router is provisioned and ready to go

### SAFETY INSTRUCTIONS

---

- Read the installation guide thoroughly before you set up the router
- The router is a complicated electronic unit that may be repaired only by authorised and qualified personnel
- Do not try to open or repair the router yourself
- Do not place the router in a damp or humid place, e.g. a bathroom
- The router should be used in a sheltered area, within a temperature range of +5 to +40 Celsius
- Do not expose the router to direct sunlight or other heat sources. The housing and electronic components may be damaged by direct sunlight or heat sources.
- Do not deploy the cable for LAN connection outdoor to prevent electronic shock hazards
- Keep the package out of reach of children
- When you want to dispose of the router, please follow local regulations on conservation of the environment

### FULL USER MANUAL

---

To download a complete user guide, visit [guides.plan.com/draytek2765](https://guides.plan.com/draytek2765)

### WEEE WARNING

---

To avoid the potential effects on the environment and human health as a result of the presence of hazardous substances in electrical and electronic equipment, end users of electrical and electronic equipment should understand the meaning of the crossed-out wheeled bin symbol.

Do not dispose of WEEE as unsorted municipal waste and have to collect such WEEE separately.

